


MSD ADDENDUM

Replacement Pro Cap Rotor Fits Distributor PN 7445 PN 7424

Install the rotor making sure that it is placed correctly on the mount and the alignment dowels are seated before installing the rotor hold down screws. Install one O-ring on each of the over-molded rotor screws for increased spark isolation as well as a belleville washer. Torque screws to 30-32 in-lbs.

Note: Torque the over-molded plastic hex screws to 30-32 in-lbs. When installing the rotor, each screw should be equipped with an O-ring and belleville washer (dome facing upward).

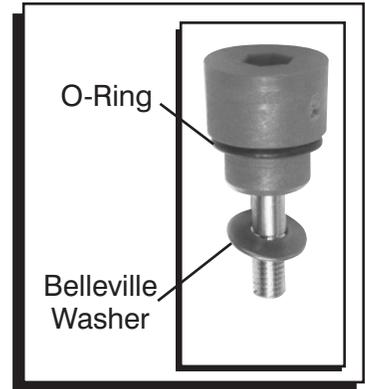

MSD • WWW.MSDPERFORMANCE.COM • (915) 857-5200 • FAX (915) 857-3344

FRM 31464

© 2013 MSD LLC
Revised 12/13


Printed in U.S.A.

MSD ADDENDUM

Replacement Pro Cap Rotor Fits Distributor PN 7445 PN 7424

Install the rotor making sure that it is placed correctly on the mount and the alignment dowels are seated before installing the rotor hold down screws. Install one O-ring on each of the over-molded rotor screws for increased spark isolation as well as a belleville washer. Torque screws to 30-32 in-lbs.

Note: Torque the over-molded plastic hex screws to 30-32 in-lbs. When installing the rotor, each screw should be equipped with an O-ring and belleville washer (dome facing upward).

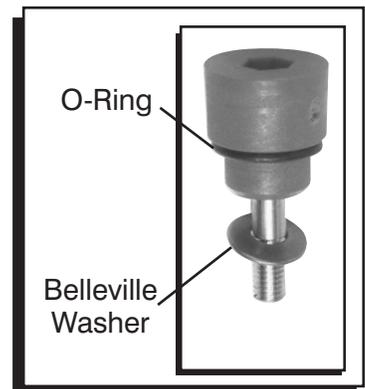

MSD • WWW.MSDPERFORMANCE.COM • (915) 857-5200 • FAX (915) 857-3344

FRM 31464

© 2013 MSD LLC
Revised 12/13

Printed in U.S.A.