

# AEROMOTIVE Part # 33101 Vacuum Regulator INSTALLATION INSTRUCTIONS

This product is not legal for sale or use on emission-controlled vehicles except when used as a direct replacement part matching OEM specification.

# **WARNING!**



Always be aware of flammable situations. Drilling and grinding can be potential ignition sources. Extinguish all open flames, prohibit smoking and eliminate all sources of ignition in the area of the vehicle and workspace before proceeding with the installation. Ensure you are working in a well ventilated area with an approved fire extinguisher nearby.

#### **WARNING!**



Installation of this product requires modification to a fuel tank/ the fuel system, failure to satisfy all safety considerations will result in fire, explosion, injury and/or loss of life to yourself and/or others. All fuel system components MUST be located as far from heat sources as possible, like exhaust, engine block,

etc.

#### **WARNING!**



Mechanical and hydraulic lifting devices can tip over or lower accidentally due to incorrect maneuvering or technical errors. A falling object can cause injury and/or loss of life to yourself and/or others. When working under the vehicle, always use stands, and ensure that the ground or floor is stable and level. Never crawl under a vehicle which is only supported by a jack.

#### **WARNING!**



The fuel system is under pressure. Do not open the fuel system until the pressure has been relieved. Refer to the appropriate vehicle service manual for the procedure and precautions for relieving the fuel system pressure.

#### **CAUTION!**



When installing this product always wear safety glasses and other appropriate safety apparel. A drilling operation will cause flying metal chips. Flying metal chips can cause eye injury.

#### **CAUTION:**



Installation of this product requires detailed knowledge of automotive systems and repair procedures. We recommend that this installation be carried out by a qualified automotive technician. Careless installation of this product can result in damage to the product, injury or loss of life to yourself and/or others.

#### **CAUTION:**

Installation of this product requires detailed knowledge of automotive systems and repair procedures. We recommend that this installation be carried out by a qualified automotive technician.


When installing this product, wear eye goggles and other safety apparel as needed to protect yourself from debris.

Aeromotive system components are not legal for sale or use on emission controlled motor vehicles.

This product is only intended for use on vehicles equipped with an aftermarket crankcase vacuum pump. These instructions assume that the vacuum pump is already installed and plumbed into the vehicle.

#### The following steps are typical of most installations:

- 1-1. Once the engine has been allowed to cool, disconnect the negative battery cable.
- 1-2. Remove the inlet fitting from the vacuum pump.
- 1-3. Both ports on the vacuum regulator are AN-12 ORB ports and air flow through the regulator can be in either direction. The regulator can be connected directly to an AN-12 ORB vacuum pump inlet port, or in the line between the vacuum pump inlet and the engine crankcase access port, which is usually located in the engine valve cover. If you decide to connect the regulator directly to the vacuum pump inlet, we recommend purchasing and installing an Aeromotive AN-12 ORB Swivel Fitting, Aeromotive part number 15680. This swivel fitting will allow you to connect the regulator directly to the AN-12 pump inlet port and still swivel the regulator so that the vacuum adjustment is easily accessible. If you decide to install the regulator in the vacuum pump inlet line, you will need to cut the line and install fittings and adapters as necessary to connect to the regulator.
- 1-4. If you wish to connect a vacuum gauge to the regulator, you may do so using the 1/8-27 NPT port located on the side of the regulator. Make sure you use teflon tape on this connection.
- 1-5. After installing the regulator and tightening all fittings, reconnect the negative battery cable and start the engine.
- 1-6. The regulator is adjustable from 8 24" Hg vacuum. To adjust the regulator opening vacuum, loosen the adjustment nut on the top of the regulator and screw the top of the regulator in for more vacuum or out for less vacuum. Retighten the adjustment nut to lock the adjustment in place.

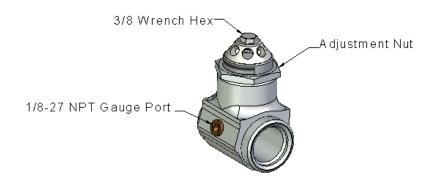

# **Contact Us**

#### RGA NUMBER REQUIRED FOR ALL RETURNS TO AEROMOTIVE.

To obtain an RGA number, please call (913) 647–7300 and ask for the Returns and Repairs department or complete the online form under the "Rebuilds" section at <a href="https://www.aeromotiveinc.com">www.aeromotiveinc.com</a>.

## • Shipping & Returns

Aeromotive Inc. 10955 Mill Creek Road Lenexa, KS 66219

General Inquiries and Tech Line: (913) 647-7300

General Email: <u>info@aeromotiveinc.com</u>
Tech Email: <u>tech@aeromotiveinc.com</u>

The Aeromotive Tech Lines are open Monday through Friday from 9:30AM to 5:00PM Central Standard Time.



**WARNING**: This product can expose you to chemicals, including chromium, which is known to the State of California to cause cancer or birth defects or other reproductive harm. For more information, visit: <a href="https://www.p65Warnings.ca.gov">www.p65Warnings.ca.gov</a>

### AEROMOTIVE, INC. LIMITED WARRANTY

This Aeromotive Product, with proof of purchase dated on or after January 1, 2003, is warranted to be free from defects in materials and workmanship for a period of one year from the original date of purchase. No warranty claim will be valid without authentic, dated proof of purchase.

This warranty is to the original retail purchaser and none other and is available directly from Aeromotive and not through any point of distribution or purchase.

If a defect is suspected, the retail purchaser must contact Aeromotive directly to discuss the problem, possible solutions and obtain a Return Goods Authorization (RGA), if deemed necessary by the company. Please call 913-647-7300 and dial option 3 for the technical service dept. All returns must be shipped freight pre-paid to the company and with valid RGA before they will be processed.

Aeromotive will examine any product returned with the proper authorization to determine if the failure resulted from a defect or from abuse, improper installation, misapplication or alteration. Aeromotive will then, at it's sole discretion, return, repair or replace the product.

If any Aeromotive product is determined defective, buyer's exclusive remedy is limited in value to the sale price of the good. In no event shall Aeromotive be liable for incidental or consequential damages.

Aeromotive expressly retains the right to make changes and improvements in any product it manufactures and sells at any time. These changes and improvements may be made without notice at any time and without any obligation to change the catalogs or printed materials.

Aeromotive expressly retains the right to discontinue at any time and without notice any Aeromotive product that it manufactures or sells.

This warranty is limited and expressly limits any implied warranty to one year from the date of the original retail purchase on all Aeromotive products.

No person, party or corporate entity other than Aeromotive shall have the right to: determine whether or not this Limited Warranty is applicable to any Aeromotive product, authorize any action whatsoever under the terms and conditions of this Limited Warranty, assume any obligation or liability of any nature whatsoever on behalf of Aeromotive under the terms and conditions of this Limited Warranty.

This Limited Warranty covers only the product itself and not the cost of installation or removal.

This Limited Warranty is in lieu of and expressly excludes any and all other warranties, expressed or implied. This Limited Warranty gives you specific legal rights, and you may also have other rights which vary from state to state.