

Instructions

Rear Diff - Rear Bushings

N.B: This instruction sheet should be used in conjunction with the workshop manual and proper safety procedures followed.

1. Raise vehicle evenly and safely support.

Never rely on a jack only.

2. Proceed to remove aluminium housing and/or diff from vehicle.
3. The original bushings will need to be pressed out. Select appropriate size tools to not damage aluminium housing.
4. Clean housing prior to pushing in supplied bushings.

Place bushing **91058** into housing on diff side
Place bushing **91059** into housing on rear side.

5. Grease bushing ID and face with supplied grease only.

Push steel tube into bushings - note large section of face rear of vehicle.


6. Re-fit diff to vehicle - tighten all bolts to manufactures spec.
7. Re-check after 100kms travelled.

Its is suggested rear diff (or aluminium housing) be completely removed from vehicle.

Press original bushings out - careful not to damage aluminium housing.

Application - BMW E36 Series
(Refer current catalogue listing)

Contents - 2x bushing 91058
- 2x bushing 91059
- 2x steel tubes
- Grease

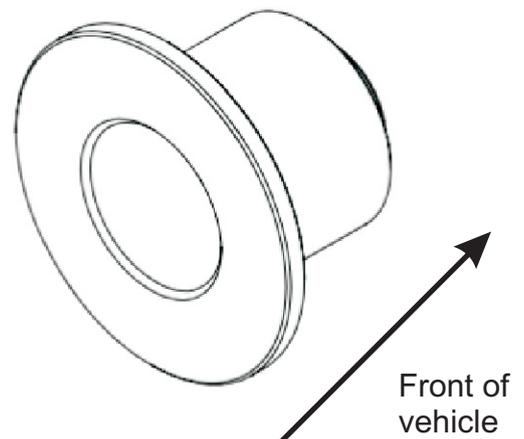

N.B: It is recommended that a licenced workshop or tradesperson carry out the above procedure and that workshop manual and relevant safety procedures are followed in addition to the above.