

NEUSPEED®

P-FLO AIR INTAKE KIT – PART #65.10.49*w/Air Pump & #65.10.48

Fits: 2013.5-UP VW JETTA GLI & BEETLE 2.0 TSI/210 HP, 2014 BEETLE, JETTA, PASSAT 1.8 TSI/170HP

PARTS LIST:

- | | | |
|------------------------------|-----------------------------------|---------------------------|
| 1 – INTAKE PIPE | 1 – STAINLESS STEEL P-FLO BRACKET | 1 – NEUSPEED FILTER |
| 1 – #48 HOSE CLAMP | 1 – RUBBER ISOLATOR | 1 – RUBBER GROMMET |
| 1 – ACORD NUT | 3 – M6 x 12mm CAP BOLTS | 3 – M6 LOCK NUTS |
| 1 – BILLET AIR PUMP FITTING* | 1 – PLASTIC HOSE SUPPORT CLIP* | 1 – MINI AIR PUMP FILTER* |

TOOLS REQUIRED:

- | | | |
|-----------------|-------------------------|--------------|
| 1 – SCREWDRIVER | 1 – 8mm NUT DRIVER | 1 – T25 TORX |
| 1 – 11mm WRENCH | 1 – SPRING CLAMP PLIERS | 1 – T30 TORX |



1. Disconnect air intake hose from air filter box using spring clamp pliers and remove spring clamp.



2. **AIR PUMP ONLY:** Squeeze collar to unlock and disconnect air pump hose from air filter box lid.



3. Disconnect vent line from air box lid.



4. Unscrew all T25 Torx screws around air filter box lid and remove.



5. Remove cover at intake duct.



6. Using a T30 Torx, unbolt lower air filter box, located on back side.



7. Using a screwdriver push in the locking tabs (one on each side of tube) and disconnect air box inlet tube from duct connected to radiator core support.



8. Lift off lower air filter box from rubber grommet mounts, then lift out left side first and rotate intake tube around small coolant hose to remove.



9. Remove air intake duct at radiator core support (2) T25 Torx, one on each side.



10. Install and tighten rubber isolator into threaded stand-off just in front of battery.



11. First install NEUSPEED intake pipe with #48 hose clamp supplied into turbo intake tube, then attach P-Flo bracket onto rubber grommet mount and rubber isolator.




12. Install and tighten supplied acorn nut using 11mm wrench.



13. Tighten #48 hose clamp at intake pipe to inlet tube using 8mm Nut Driver.



14. Connect vent line to *NEUSPEED* intake pipe.

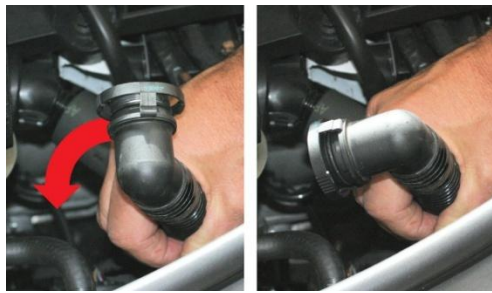

15. **AIR PUMP ONLY:** Rotate air pump fitting 90-degrees counter-clockwise.



16. **AIR PUMP ONLY:** Attach mini filter to billet fitting and tighten. Then connect to air pump hose fitting.



17. **AIR PUMP ONLY:** Attach supplied black plastic hose support clip from radiator coolant vent hose to air pump hose.



18. For extra protection, slide coolant hose protector sleeve just under P-Flo bracket.



19. Attach and tighten *NEUSPEED* air filter using 8mm Nut Driver.



20. Install rubber strip on top-edge of P-Flo bracket.



21. Double-check complete installation.

Copyright 2014, *NEUSPEED*®. All rights reserved.
Reproduction in whole or in part prohibited.
DOC.65.10.49/48 Rev. 01.15.14