

# **MSD** INSTALLATION INSTRUCTIONS

## **MSD Marine Distributor Cap PN 8565**

**ONLINE PRODUCT REGISTRATION:** Register your MSD product online. Registering your product will help if there is ever a warranty issue with your product and helps the MSD R&D team create new products that you ask for! Go to [www.msperformance.com/registration](http://www.msperformance.com/registration).

### **Parts Included:**

1 - Cap, PN 8565

2 - 10-32 x 3/4" SHC Screws


1 - Wire Retainer

2 - 1.5" Phillips Head Screws

**Note:** If you need to adapt your spark plug wire boots and terminals to fit the towers of the PN 8565 Cap, MSD offers a kit of nine boots and terminals, PN 8849.

This Cap fits MSD Marine Distributors that may also use the Socket style MSD Cap, PN 8564.

Before installing the new cap, note the location of the spark plug wires. It is a good idea to mark the location of one wire before removing it while leaving the other wires connected to the old cap. Install the new cap by using the two 10-32 x 3/4" socket head cap screws. With the new cap installed, you can install each wire individually avoiding any confusion.

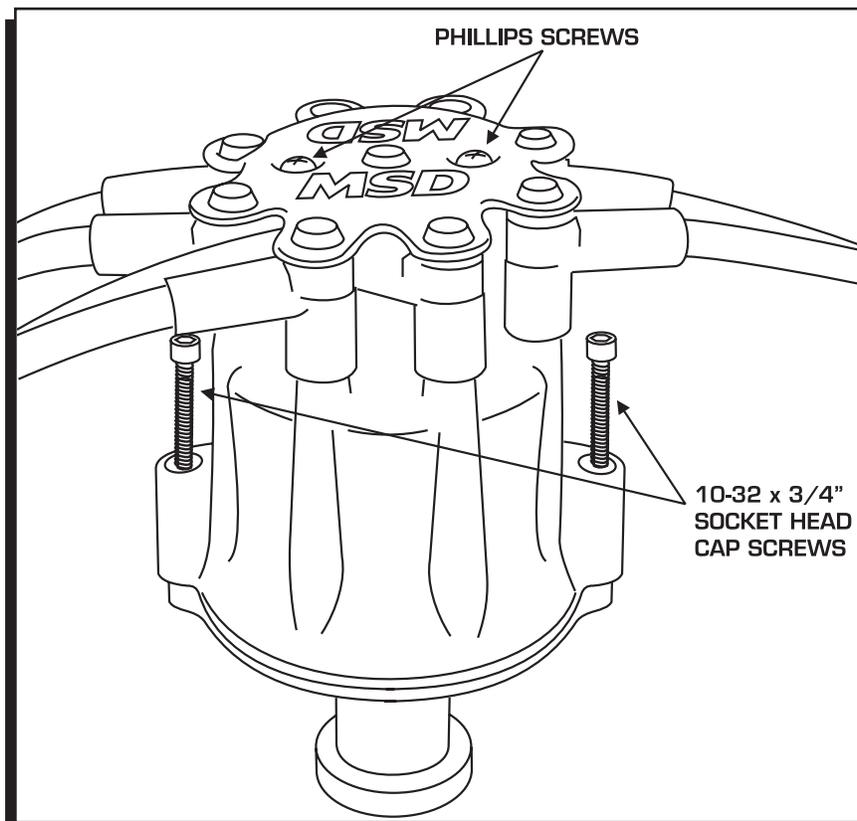

**Figure 1 Installing the Wire Retainer.**

After installing the spark plug wires, position the retainer over the boots. Align the mounting bosses and use the supplied 1.5" self-tapping Phillips head screws to hold the retainer in place. It may be necessary to apply a slight amount of lubricant to the boots to help them seat into the retainer properly.

