

PARTS LIST


Qty	Part #	Description
1	D403-0015	Air Filter with clamp
1	D762-0087	Intake Hose; Small
1	D762-0088	Intake Hose; Large
1	D762-0089	Air Filter Tube
1	D762-0090(A)	Carbon Tube
1	D763-0031	Hardware Kit; includes: (2) Hose Clamps; 120-140mm (2) Hose Clamps; 160-180mm (1) M6x30 Button-head Screw (1) 6mm Washer (1) D762-0128 Plunger Adapter (for 2010-13 models only)

INSTALLATION INSTRUCTIONS


- I. Remove the stock intake (see Figure 1 below):
 - A. Release the T25 torx head screws and remove the airbox lid.
 - B. Disconnect the flexible hose by squeezing the top and bottom of the lock ring, and detach from the intake duct.
 - C. Loosen the hose clamp at the intake plenum, and remove the entire stock intake tract and air filter.

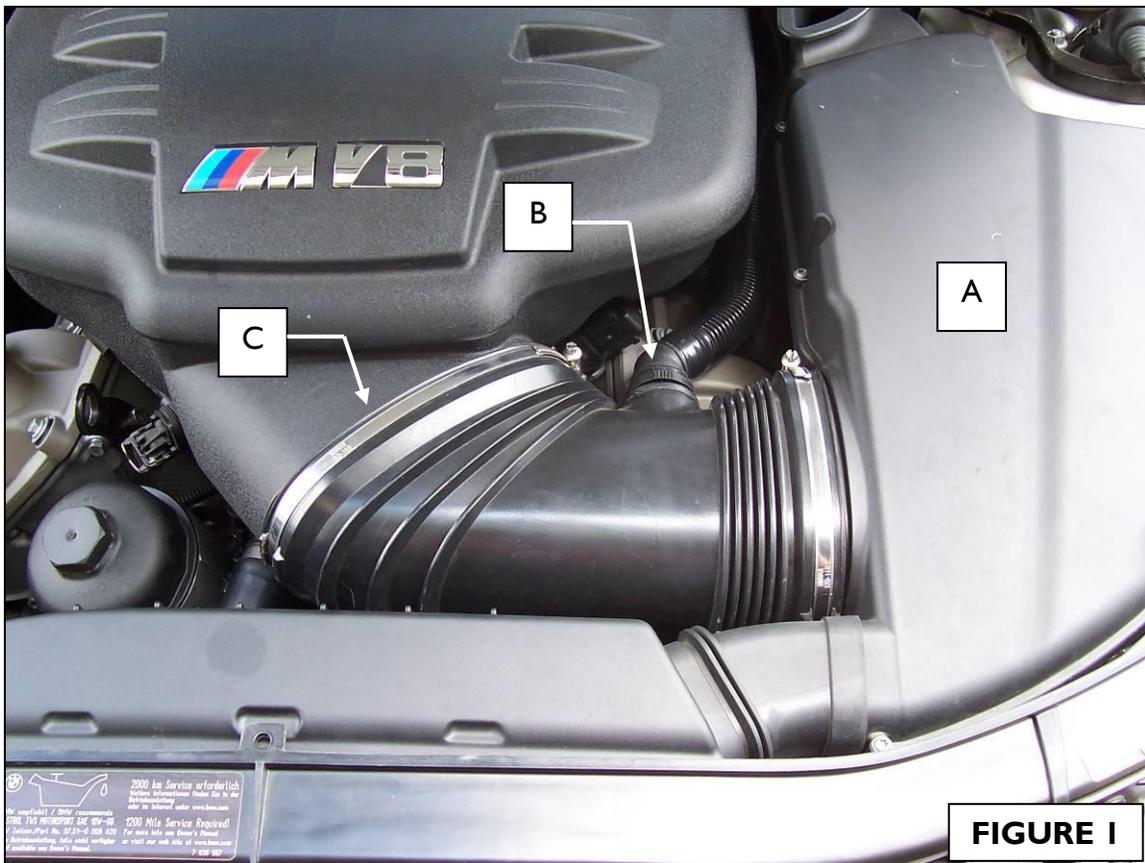

2. See Figure 2 below. Remove the stock hex head bolt and install the supplied button-head bolt and washer.

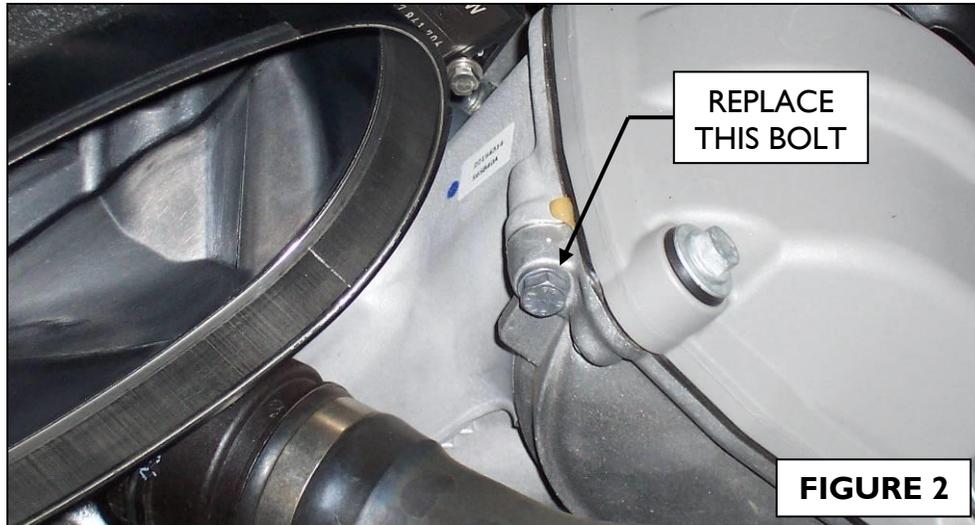

3. Install Dinan intake as shown in Figure 3, keeping in mind the following:
 - A. DINAN lettering on both hoses face upwards.
 - B. For best fit, arrange the screw heads of the hose clamps as shown.
 - C. When tightening clamps, ensure that the band applies pressure evenly around the entire connection. "Walk" the bands around the rubber hoses as needed.
 - D. Spring-loaded plunger in airbox engages the dimple in air filter cap. For 2010-13 models, insert the supplied plunger adapter between the air filter and plunger.
 - E. Airbox wall rests in groove of air filter tube.

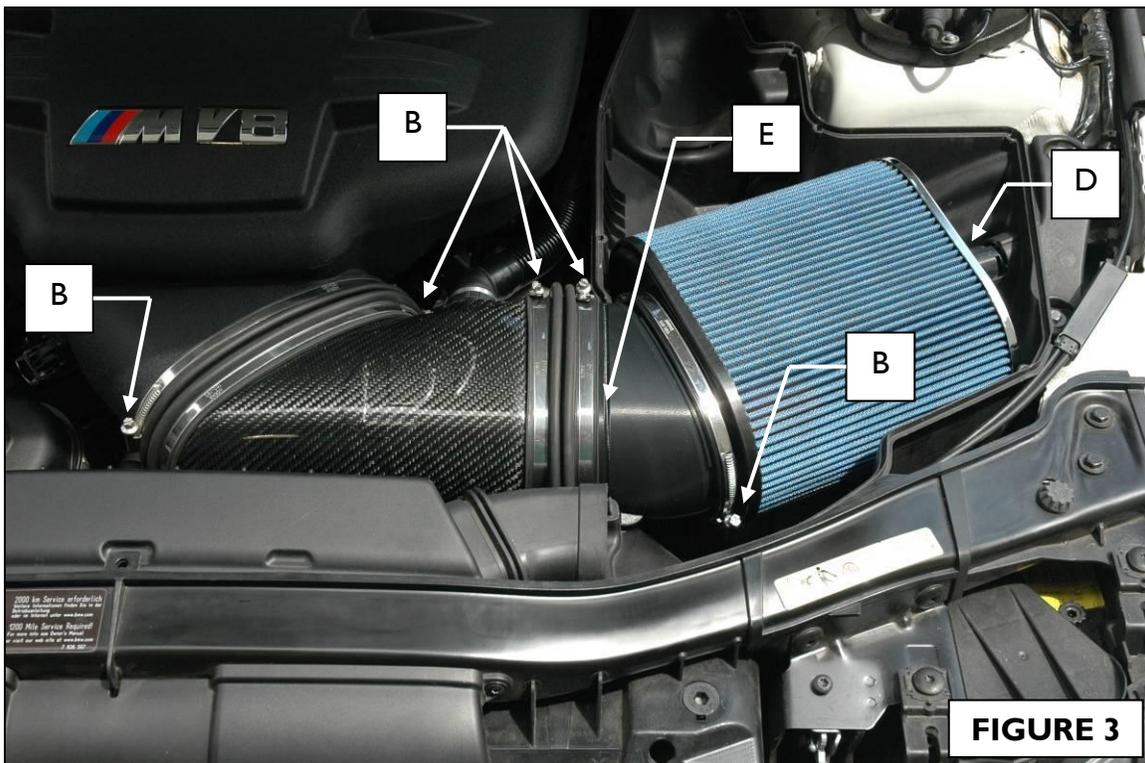

4. Reinstall airbox lid.