

MSD Cap Bolt Down Kit, PN 8499 Fits Only with MSD large Ford Style Caps PN 8408 and PN 84083

Parts Included:

2-1.5" Phillips Head Screws 2-Al Hold Down Clips 2-Bolt Down Clamps

WARNING: When installing any electronic accessory or component, disconnect the battery cables. When disconnecting, always remove the negative cable first and install it last.

This Bolt Down Kit is designed to replace the spring clamps that come with MSD Distributors and Cap-A-Dapts that use the large Ford Style Caps.

Note: Once the Aluminium Clips have been installed they cannot be removed without damaging the housing.

<u>INSTALLATION</u>

Remove the distributor cap. Using pliers, remove the spring clamps from the housing. Insert the aluminium hold down clips, as shown in Figure 1, and press in until they snap into place. Fit the cap to the housing and slide the bolt down clamps into the slots on the cap. Insert the supplied screws and tighten.

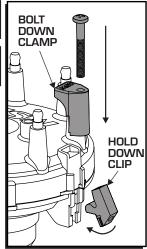


Figure 1 Installation

MSD • WWW.MSDPERFORMANCE.COM • (915) 857-5200 • FAX (915) 857-3344 © 2018 MSD LLC

FRM35226 Created 06/18



MSD Cap Bolt Down Kit, PN 8499 Fits Only with MSD large Ford Style Caps PN 8408 and PN 84083

Parts Included:

2-1.5" Phillips Head Screws 2-Al Hold Down Clips 2-Bolt Down Clamps

WARNING: When installing any electronic accessory or component, disconnect the battery cables. When disconnecting, always remove the negative cable first and install it last.

This Bolt Down Kit is designed to replace the spring clamps that come with MSD Distributors and Cap-A-Dapts that use the large Ford Style Caps.

Note: Once the Aluminium Clips have been installed they cannot be removed without damaging the housing.

INSTALLATION

Remove the distributor cap. Using pliers, remove the spring clamps from the housing. Insert the aluminium hold down clips, as shown in Figure 1, and press in until they snap into place. Fit the cap to the housing and slide the bolt down clamps into the slots on the cap. Insert the supplied screws and tighten.

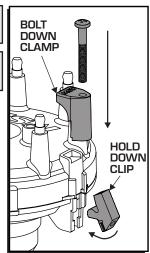


Figure 1 Installation