




**Rain Guard For Injen Evolution Intake System P/N:EVO1800 Sold seperately**

**Part number  
EVO1800RG  
Rain Guard  
2008-2015  
Mitsubishi Evolution X  
2.0L I4 Turbocharged 4B11T**

- 1- Rain shield Guard X-20126
- 2- M6 Socket cap screw (#6083)
- 1- 1 page instruction

**Please check the contents of this box immediately.**  
Report any defective or missing parts to the Authorized Injen Technology dealer you purchased this product from. Before installing any parts of this system, please read the instructions thoroughly. If you have any questions regarding installation please contact the dealer you purchased this product from. Installation DOES require some mechanical skills. A qualified mechanic is always recommended.  
\*Do not attempt to install the intake system while the engine is hot. The installation may require removal of radiator fluid line that may be hot.  
Injen Technology offers a limited lifetime warranty to the original purchaser against defects in materials and workmanship. Warranty claims must be handled through the dealer from which the item was purchased.  
Injen Technology 244 Pioneer Place Pomona, CA 91768 USA

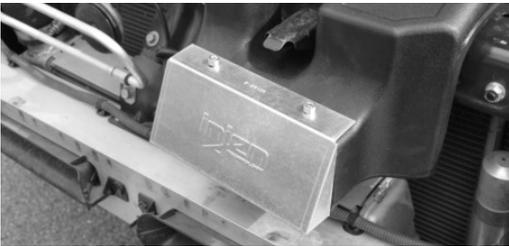


**WARNING: FAILURE TO FOLLOW INSTALLATION INSTRUCTIONS AND NOT USING THE PROVIDED HARDWARE MAY DAMAGE THE INTAKE SYSTEM, ENGINE AND COMPONENTS!!!**  
**\*Do not attempt to install the intake system while the engine is hot.**  
Severe burn could result from touching hot engine components!

**Caution: The installation of this rain guard does not protect the engine from ingesting water during heavy rain fall or floods. The rain guard will help deflect direct rain from entering the Injen Ram Air inlet during light rain fall. Injen Technology Ram Air Intake Systems should be removed in wet climate conditions. Failure to comply with the above warning may cause water to be absorbed into the engine through the Intake System causing serious engine failure. Injen Technology assumes no liability for damages to your engine due to water entering your engine through the Injen Technology Intake System.**



Remove front bumper cover. (see injen Evolution instruction sheet EVO1800)

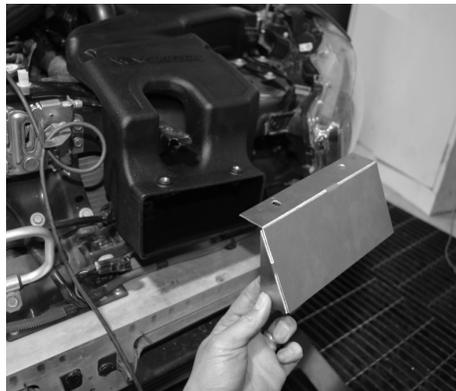

Install the rain guard. Secure using provided M6 socket cap screws and tighten.



Rain guard installation is now complete. Re-install and secure the intake system. **Note: Check clearance and adjust if needed! Failure to check the alignment and adjust the intake can cause damage that will void the warranty. Injen Technology is not responsible for any damages caused by/from improper installation.**