





Complete stock axle back exhaust shown.



With 14mm socket and ratchet loosen the 2 bolts holding in the exhaust on the flange.

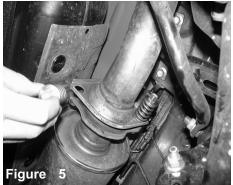

Remove the 2 bolts and springs and set aside, you will be using these for the injen exhaust.

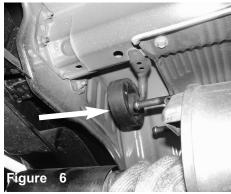

With lubrication, place on the hangers and slide the exhaust back from the rubber isolator.



Carefully position and slide back and remove the exhaust out of the vehicle.




Now install the new axle back into the vehicle. Position to the flange and the hangers to the rubber isolator.



Attach the flange on to the factory flange.



Now secure using the factory screws from steps 4 & 5. Note: Snug fit and rotate for the tip to sit and position in the center of the exhaust cut-out on bumper.

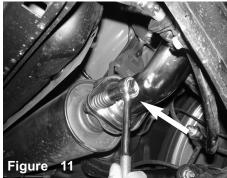

Now secure and tighten using14mm socket and ratchet.



Position for the best fit and clearance. Re-tighten if necessary.



Your installation of the Injen axle-back exhaust is now complete. Thank you for choosing Injen Technology!