

These instructions are intended for the following part numbers: **1110-11010**



PORSCHE FOILER™ WIND DIFFUSER INSTALLATION GUIDE:

Vehicle Fitment:

- **Porsche 991.1** (All Models)
- **Porsche 991.2** (All Models)
- **Porsche 981** (All Models)
- **Porsche 911** (2019)
- **Porsche 718** (All Models)

Welcome to the AWE family! By purchasing this **AWE Foiler™ Wind Diffuser** you are showing your Porsche that 'sound' matters; some sounds are unwelcome, and will be silenced ...*discretely*.

Installation questions?
CONTACT US

PARTS LIST



INSPECT ALL PARTS PRIOR TO DISASSEMBLY OF VEHICLE; IF DAMAGED OR MISSING, PLEASE CONTACT THE PLACE OF PURCHASE IMMEDIATELY.

Foiler™ Wind Diffuser Parts:

- 1 Driver side Foiler™
- 1 Passenger side Foiler™
- 2 Late model adapters
- 2 Early model adapters
- 2 Attachment screws

Tools Required:

- Flat trim removal tool
- Phillips head screwdriver
- T-15, T-20 & T-30 Torx bits
- 10mm wrench

STEP 1




Always refer to the manufacturer service manual for precise torque specifications on all OEM fasteners.



Climate Warning: Plastic becomes brittle in colder climates and can break easily if mishandled.

Using a flat trim removal tool, remove the interior triangle trim piece on the door panel shown at the arrow in **Figure 1**. Start at the bottom and pry upwards.

Once the part is free, there will be a “J-hook” visible holding it in place, which is very flexible. Rotate the trim piece toward the front of the car while gently pulling upwards to remove it from the door.

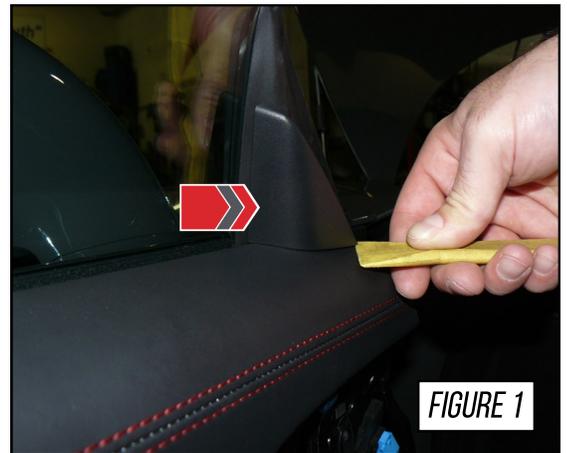

STEP 2

Click on the image below that represents what you see. The remaining instructions will be uploaded to correctly install your **AWE Foiler™ Wind Diffuser**.



“Visible Screw”



“Hidden Screw”