


# Installation Instructions




1131 VIA CALLEJON, SAN CLEMENTE, CA 92673

172336  
4/14/97KN

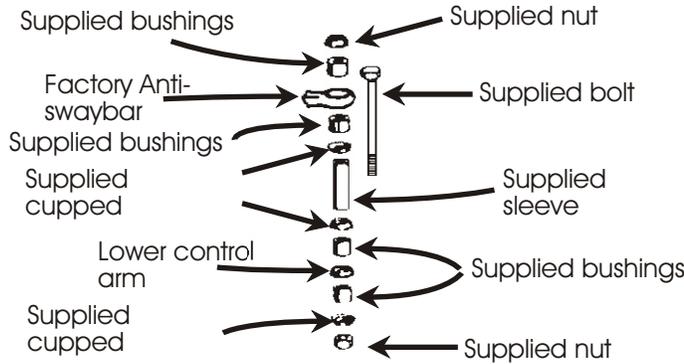

**"Standard style" endlink**

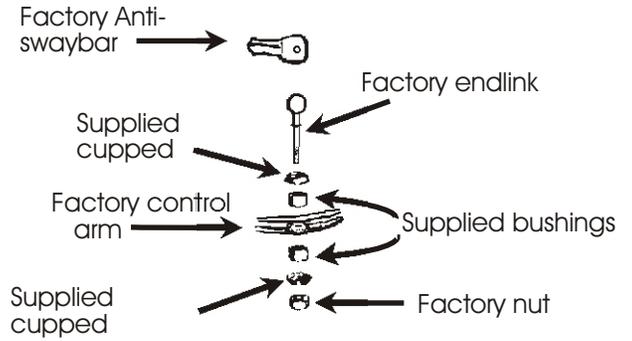

**"Tie-rod style" endlink**  
(uses **only** the parts shown above)

Many Import vehicles come with one of the style endlinks shown above. The "standard style" will use all of the parts supplied in the kit. The "Tie-rod style" will only use the supplied cupped washers and the supplied grommets(bushings). All other parts are not used on the "Tie-rod style" endlink.


© 2003 Energy Suspension. All rights reserved.  
May not be reproduced, in any form, or by any means,  
without the written consent of Energy Suspension.

# Installation Instructions




1131 VIA CALLEJON, SAN CLEMENTE, CA 92673

172336  
4/14/97KN

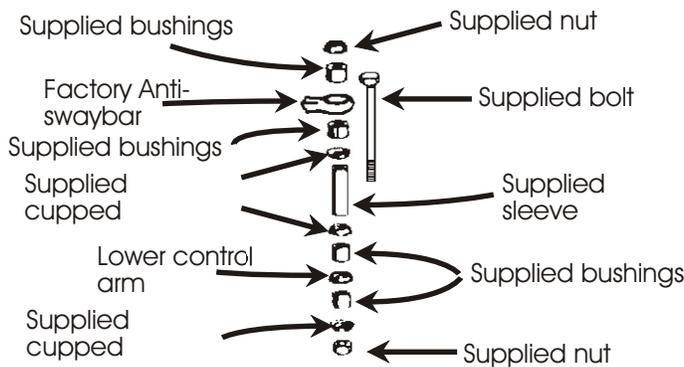

**"Standard style" endlink**

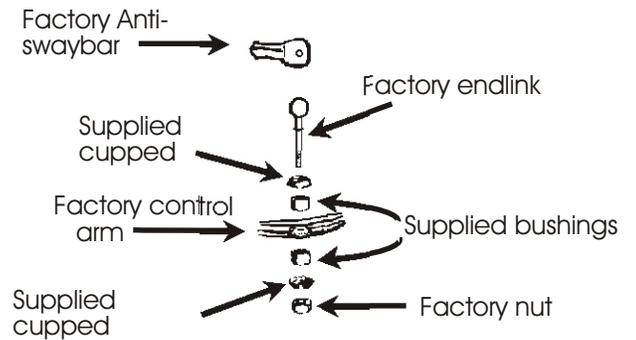

**"Tie-rod style" endlink**  
(uses **only** the parts shown above)

Many Import vehicles come with one of the style endlinks shown above. The "standard style" will use all of the parts supplied in the kit. The "Tie-rod style" will only use the supplied cupped washers and the supplied grommets(bushings). All other parts are not used on the "Tie-rod style" endlink.

© 2003 Energy Suspension. All rights reserved.  
May not be reproduced, in any form, or by any means,  
without the written consent of Energy Suspension.