

Installation instructions

Set # 5.4112 / 5.4113



1131 VIA CALLEJON, SAN CLEMENTE, CA 92673

Removal


Spray all nuts to be removed generously with your favorite rust buster.

Note: When disassembling, note the quantity and positions of any shims that may have been inserted for body alignment. These shims will have to be reused to insure proper body alignment.


Remember: Only raise body high enough to remove & replace mounts. Always watch the fan shroud for sufficient clearance when raising the body. When jacking the body use a long enough 2X4 or 4X4 for maximum support. Never put jack directly on body panels.

Install mounts one side at a time with bolts on other side loosened only.

Retorque to factory specs.

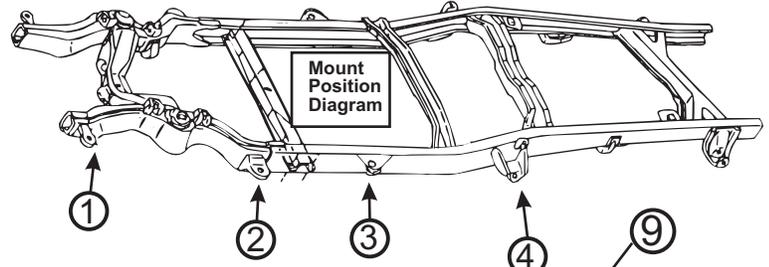

Must Remove Shifter Bracket And Park Brake Clamp From Frame Before Lifting Body

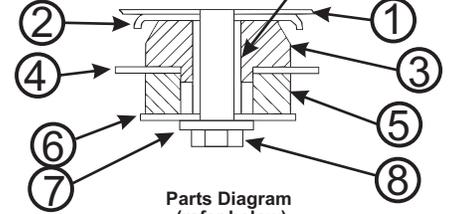

Parts Diagram (refer below)

Position # 1-3

1. BODY
2. 15.03.11.39 BIG WASHER
3. 4149 BUSHING
4. FRAME
5. 4148 BUSHING
6. 15.03.11.39 BIG WASHER
7. 15.03.36.39 SMALL WASHER
8. 15.05.89.39 BOLT
9. 15.10.515.39 SLEEVE

Position # 4
Club Cab Only

1. BODY
2. 15.03.11.39 BIG WASHER
3. 4149 BUSHING
4. FRAME
5. 4148 BUSHING
6. 15.03.11.39 BIGWASHER
7. 15.03.36.39 SMALL WASHER
8. 15.05.89.39 BOLT
9. 15.10.515.39 SLEEVE

© 2011 Energy Suspension. All rights reserved.
May not be reproduced, in any form, or by any means, without the written consent of Energy Suspension.

175665
22/MAR/11 BR

Installation instructions

Set # 5.4112 / 5.4113



1131 VIA CALLEJON, SAN CLEMENTE, CA 92673

Removal


Spray all nuts to be removed generously with your favorite rust buster.

Note: When disassembling, note the quantity and positions of any shims that may have been inserted for body alignment. These shims will have to be reused to insure proper body alignment.


Remember: Only raise body high enough to remove & replace mounts. Always watch the fan shroud for sufficient clearance when raising the body. When jacking the body use a long enough 2X4 or 4X4 for maximum support. Never put jack directly on body panels.

Install mounts one side at a time with bolts on other side loosened only.

Retorque to factory specs.

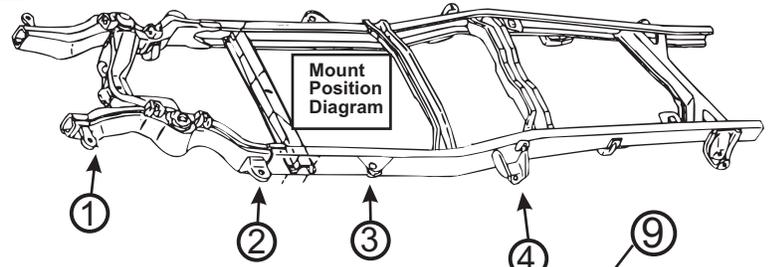

Must Remove Shifter Bracket And Park Brake Clamp From Frame Before Lifting Body

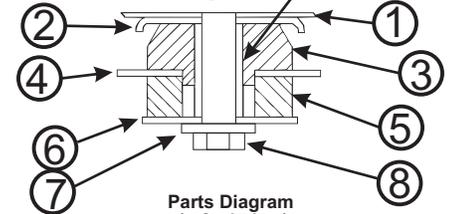

Parts Diagram (refer below)

Position # 1-3

1. BODY
2. 15.03.11.39 BIG WASHER
3. 4149 BUSHING
4. FRAME
5. 4148 BUSHING
6. 15.03.11.39 BIG WASHER
7. 15.03.36.39 SMALL WASHER
8. 15.05.89.39 BOLT
9. 15.10.515.39 SLEEVE

Position # 4
Club Cab Only

1. BODY
2. 15.03.11.39 BIG WASHER
3. 4149 BUSHING
4. FRAME
5. 4148 BUSHING
6. 15.03.11.39 BIGWASHER
7. 15.03.36.39 SMALL WASHER
8. 15.05.89.39 BOLT
9. 15.10.515.39 SLEEVE

© 2011 Energy Suspension. All rights reserved.
May not be reproduced, in any form, or by any means, without the written consent of Energy Suspension.

175665
22/MAR/11 BR