

# **AFE CONTROL FRONT/REAR TOW HOOK BMW G87**

**Product Number:** 450-502004-B, 450-502004-G, 450-502004-L, 450-502004-R

**Installation Time:** 5 min.

**Fitment Position:** This tow hook fits front or rear locations



## **Recommended Tools:**

Sockets: 1", 16mm

## Parts List:

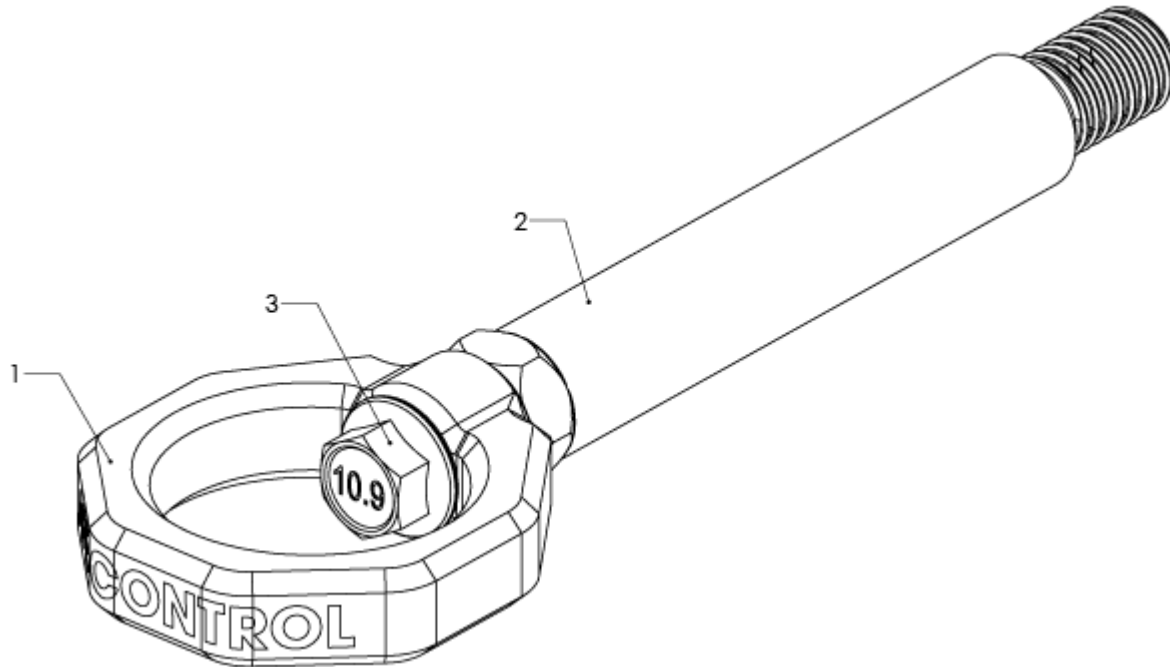


Diagram #	Part No.	Description	Qty.
1	00P-0P2535-R	Loop, Tow Hook Red	1
	00P-0P2535-L	Loop, Tow Hook Blue	
	00P-0P2535-B	Loop, Tow Hook Black	
	00P-0P2535-G	Loop, Tow Hook Gray	
2	00P-0P2716-B	Stem, 7", BMW G87	1
3	00P-0C1700-B	Bolt, M12-1.75x40 Hex Flange	1

This kit contains (1) tow hook and can be installed in the front or the rear. Please purchase (2) tow hook kits for a full car set.

**Installation:**

- 1 Pop plastic tow hook cover off by gently pushing in at the “arrow” by hand. It should pop ajar and allow you to then pull out.








- 2 Install tow hook stem into the factory threaded hole. Both the stem and bolt threads are pre-coated with Vibra-tite threadlocker. This keeps your tow hook from loosening due to vibration. The special threadlocker is designed to remain flexible, removable, and reusable. Fully tighten stem with a 1" socket.



**Optional Step** – Once the stem is in place, you have the option to modify the cover plate to fit with the tow hook if you wish. Perform this at your own discretion. If you would like to have a backup cover plate painted in your color, you can purchase one from IND distribution ([ind-distribution.com](http://ind-distribution.com)). Choose “OE No Cutout” when selecting the cover.


Using a Dremel or grinder, cut a circular opening in the cover plate. There will be some back and forth, cutting and test fitting. Cut little at a time to home in on the perfect shape to fit the stem.

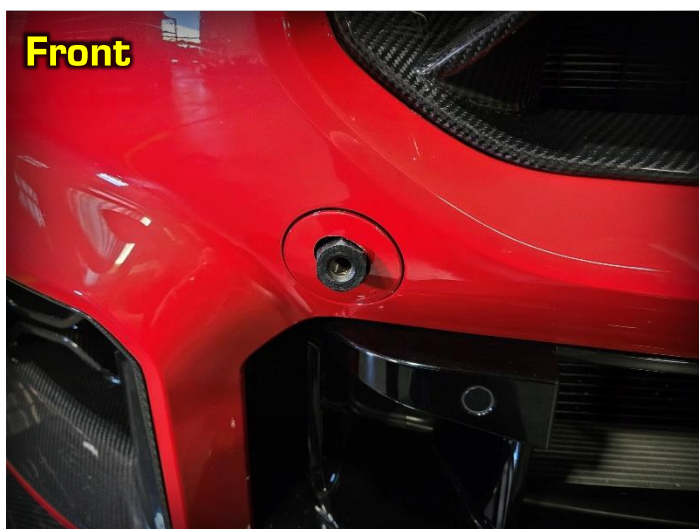

- 3 Install the tow hook loop and M12 flange bolt using a 16mm socket.



You are finished with the installation.

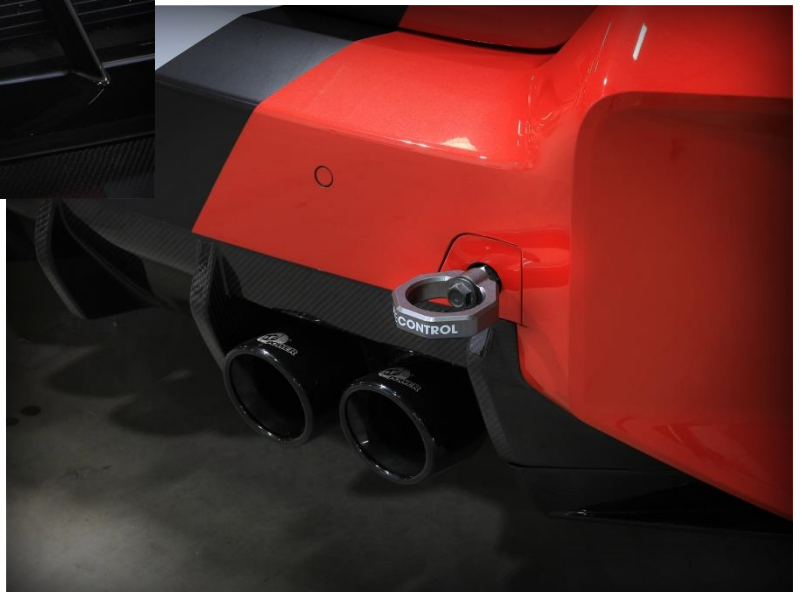



Page left intentionally blank